

# Operating Manual For Easy Clicker

UR2L-R803



## 1 Introduction

This remote control is designed to operate Cable boxes and TVs.


## 2 Replacing Batteries

Before you program or operate the remote control, you must install two new AAA alkaline batteries.

**STEP1** Remove the battery compartment cover from the back of your remote control.

**STEP2** Check battery polarity carefully, and install the batteries as shown in the illustration below.

**STEP3** Replace the battery compartment cover.

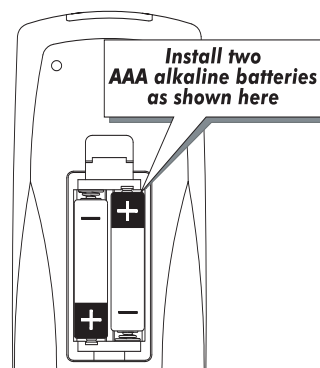

## 4 Programming the Remote Control

### A. Quick Set-Up Method

(Refer to the Section B Quick Set-up table of codes)

**STEP1** Turn on the component you want to program. To program your TV, turn on the TV.

## 3 Button Functions

**INFO**  
Displays information about the program currently playing or highlighted in the program guide.

**OK/SEL**  
Selects highlighted screen options.

**PAGE +/-**  
Accesses pages above or below the information currently displayed.

**VOL ▲/▼**  
Raises or lowers the sound level.

**MUTE**  
Silences the audio. Press to activate. Press this key again to restore sound to previous level.

**TRANSPORT**  
Selects items to control the playback of what is being viewed.

**\***  
Reserved for future use.

**LIGHT BUTTON**  
Press to backlight all keypad buttons. Press again to turn off (or simply wait 10 seconds for automatic shut-off).

**POWER**  
Designed to send Power On/Off commands for up to two Components with one buttons press.

**GUIDE**  
Displays the program guide listings.

**EXIT**  
Exit from current screen.

**▲, ►, ▼, ◀**  
Highlight an item from the on-screen choices.

**CH ▲/▼**  
Selects the next higher or lower channel.

**LAST**  
Accesses the previously tuned channel.

**ON DEMAND**  
Provides direct access to On Demand channel.

**NUMBER Pad**  
Enter numbers to tune to channels. Also make numeric entries on on-screen menus. You can also use the CH▲/▼ and the guide as alternate ways to tune to channels.

**#**  
Changes the HD screen viewing aspect ratio through the Cable STB.

**STEP2** Press and hold the [HOME] key for 5 seconds until the POWER LED will blink once and stays on. Continue to hold the [HOME] key and press the number key assigned to your brand in the Quick Set-up Code Table and release both [HOME] key and the number key to save the code. The POWER LED will blink twice to confirm that the code is stored.

**STEP3** Point the remote control at the component.

**STEP4** Press the power button. If it turns off, it is programmed for your component. If it does not turn off, use the Pre-Programmed 3-Digit code Method or Scanning Method.

## B. Quick Set-up Code Tables

### TV

Quick Number	Manufacturer/Brand
0	SANYO
1	SONY
2	SAMSUNG
3	LG
4	TOSHIBA
5	PANASONIC
6	PHILIPS
7	HITACHI
8	SHARP
9	VIZIO

## C. Manual Programming

The remote control can be programmed by entering a three-digit code number

that corresponds to particular brands and models of equipment. The three-digit code numbers are listed in the code tables sections of this instruction manual.

**STEP1** Turn on the equipment that you want the remote control to operate TV.

**STEP2** Press the [HOME] button and the [OK/SEL] button simultaneously for 3 seconds. The POWER LED will turn on indicating that it is ready to be programmed. The LED will remain on for 30 seconds.

**STEP3** Point the remote control toward the equipment and enter the three-digit code number assigned to your brand from the code tables. If there are more than one three-digit number listed for your brand, try one code number at a time until your equipment turns off.

*\*Note: You can verify that you have selected the correct code by pressing the [POWER] button. The equipment should turn back on. Then try all of the functions on the remote control (i.e. volume, mute, etc.) to ensure you have the correct code. If any of the functions do not operate as they should, repeat the instructions from STEP 3 above using the next three digit code number from the brand list.*

**STEP4** Store the three-digit code by pressing the [HOME] button once again. The POWER LED will blink twice to confirm that the code has been stored.

## D. Auto Search Method

If none of the three digit code numbers assigned to your brand of equipment works, or the code table does not list your brand, you can use the Auto Search Method to find the correct three-digit code number for your equipment by following steps:

**STEP1** Turn on the equipment that you want the remote control to operate TV.

**STEP2** Press the [HOME] button and the [OK/SEL] button simultaneously for 3 seconds. The POWER LED will turn on indicating that it is ready to be programmed. The LED will remain on for 30 seconds.

**STEP3** Press the [CH▲] or [CH▼] button one at a time or keep it pressed. The remote will emit a series of Power ON/OFF code signals. Release the [CH▲] or [CH▼] button as soon as the equipment turns off.

*\*Note: You can verify that you have selected the correct code by pressing the [POWER] button. The equipment should turn back on. Then try all of the functions on the remote control (i.e. volume, mute, etc.) to ensure*

*you have the correct code. If any of the functions do not operate as they should, repeat the instructions from STEP 3 above to continue the Auto Search Method.*

**STEP4** Press the [HOME] button to store the code. The POWER LED will blink twice to confirm that the code has been stored.

## E. The Learning Method

**STEP1** Press the [POWER] button to be programmed and the [#] buttons simultaneously for 3 seconds until the LED light turns on.

**STEP2** Point the remote at the other remote, head-to-head, 1 or 2 inches apart.

**STEP3** Press the button on the remote that you want to teach a command to. For example, press the [MUTE] button to learn a command to the [MUTE] button.

**STEP4** Press and hold the button on the other remote that corresponds to the command you want to teach until the LED light blinks twice.

*\*Note: The LED will blink 5 times if there was an error in the learning process. Repeat STEPS 3 and 4 if this occurs. Continue learning other buttons by repeating STEPS 3 and 4.*

**STEP5** Once you have completed teaching the remote all desired commands for the

